USB Single port tool (Format) download instructions

First: Select tool.





Third: Select format.

lashTool		
Actions nload Rea	Options Mindow Help Baudrate COM Port	3.1 Select format option
vnload Agenl Voad Agent	USB Download/Readback USB Download/ReadBack (Data Car Send RootCert Forcibly	RootCert File Format Download shTool_v5.1216.02\MTK_AllInOne_DA.bin
er File Intication File cate File	USB Download Without Batt Operation Methods Transmission Options Baseband Chip Options	120615)\BESTONE50D_11B_PC801_gprs_MT6250_S00.D1
Dert File NRM_BL NRM_EXT_B PRIMARY_M /IVA	 Format FAT (Auto) Backup and Restore (No Action) . Upload (No Upload) Multi-Load (No Action) FAT Range Check Before Download 	ss Location AF E:\\desktop\version\D1XMC_EH_V0.0.3(20120 1B E:'_\desktop\version\D1XMC_EH_V0.0.3(20120 57 E:'_\desktop\version\D1XMC_EH_V0.0.3(20120 B7 E:'_\desktop\version\D1XMC_EH_V0.0.3(20120

Format Options 3.2. Then, select	X
© Do Not Format FAT " The FAT area is not formatted after miload process.	ОК
C Reset to Factory Default	Cancel
FlashTool resets NVRAM at items that have NVRAM_CATEGORY_FACTORY attribute. NOTICE! Only available from w05.52.	T Validation
© Format FAT	
Flash roof automatically formats the FAT area. The format begin address and format length need not to be set.	
C Total Format	
FlashTool automatically formats the total flash area. The format begin address and format length need not to be set. WARNING! Calibration data is erased.	



Fourth: Select file.

🜈 FlashTool					_ 🗆 🔀
Download Read Back Memo Download Agent Scatter/Conf	ndev Belg ny Test ig File Auth File	Cent Fi	4.1 And then select this file	ot Downlos	od Stop
Download Agent D: Virvi¥fit. Scatter File E: Vit. 00 V872 Authentication File RootCert File Name Region ✓ ARM_BL 0x7000 ✓ ARM_BL 0x7000 ✓ PRIMARY_MAUI 0x1000 ✓ VIVA 0x1000	Open Downlo 查找范围 (1): Recent desktop	nd Agent Fi FlashTool			Contractor Contra
		文件名 (g): 文件类型 (g):	WTK_AllInOne_DA Bin File (*.bin)	•	open cancel
¢			02		>
	NOR Sea	ching 921600	bps		



FlashTool File Actions Options Window Download Read Back Memory T Download Agent Scatter/Config Fi	4.2 col ext Auth File	Pirst, select nfiguration file	4.3 Then, se this option	lect
Download Agent D. Un Will O Scatter File E: \⊈ @ 0 Authentication File Certificate File Name Regior ☑ ARM_BL 0x700 ☑ ARM_EL 0x700 ☑ PRIMARY_MAUI 0x1000 ☑ VIVA 0x1000	pon Scatter File . 查找范围(1): DESTON Recent 原面 更的文档 更加 致的文档 可以的文档	 NESOD_11B_PCB01_07_NT6250_5 ESOD_11B_BB		Dowlload CONTRACT CONTRA
<	文件名 (J) 文件类型 (: Scatter/Config File (*. txt, *. cfg) T Canc	el
	NOR Searching 921	0%		

Fifth: Begin to download.

5. Press	"down	load",	press	s and h	old the	e left s	oft
key, and	d then	insert	USB	cable;	Then	begin	to

Download Read B	ack Memory Test						
Download Agent	Scatter/Config File	Auth File	Cert File	RootCert File	C) Format		0 Stop
Download Agent	D: FlashTool_v5.1216.	02\MTK_AllnOn	e_DA.bin			\smile	Dogtalijter
catter File	" \desktop\versio	n\D1_XMC_EH	V0.0.3(2012061	15/NBESTONE50D_118_	PCB01_gprs_h	T6250_S00.D1_XMC_I	H_VI
uthentication File							* Download
addicate File							BootROM
Cont Cost Ello							Download
Name	Region address	Ranin address	End address	Lacation	(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)		
	0x70008000	0x70008000	0x7000A1AF	Vdesktop/version	1 ¹ D1 - XMC F	H V0.0.3(20120615)\B	ESTONESOD 118 PCB01
ARM_EXT_BL	0x10003000	0x10003000	0x1000491B	E: \desktop\versio	n/D1 xmc_e	H_V0.0.3(20120615)\B	ESTONE50D_118_PCB01
PRIMARY_MAU	0x10005000	0x10005000	0x10080357	E' \desktop\versio	DI XMC_E	H_V0.0.3(20120615)\B	ESTONE50D_11B_PCB01
M MMA	UK10080758	UKTUUBU758	UX1U3B3AB7	* \desktop\versid	DU/D 10xmc_e	н_үш ш.а(20120615)ла	ESTUNE500_THE_PCB01_
<	la face a time			60)			1 13
Parameters	Information addr/0x00000000	Leon DTP W	aue	en.			1 13
< Parameters OTP	Information addr(0x00000000), len(0), OTP_W	RITE,	760 			
Parameters OTP	Information add(0x00000000). len(0). OTP_W1	RITE,	(m)			
Perameters OTP	Information add(0x00000000), len(0), 0TP_W1	RITE,	Of: (Waiting)			()

