Guide for Writing MEID / IMEI

Contents

1. Equipment required
2. Notice
3. Installation
4. Writing MEID / IMEI

1.Equipment required
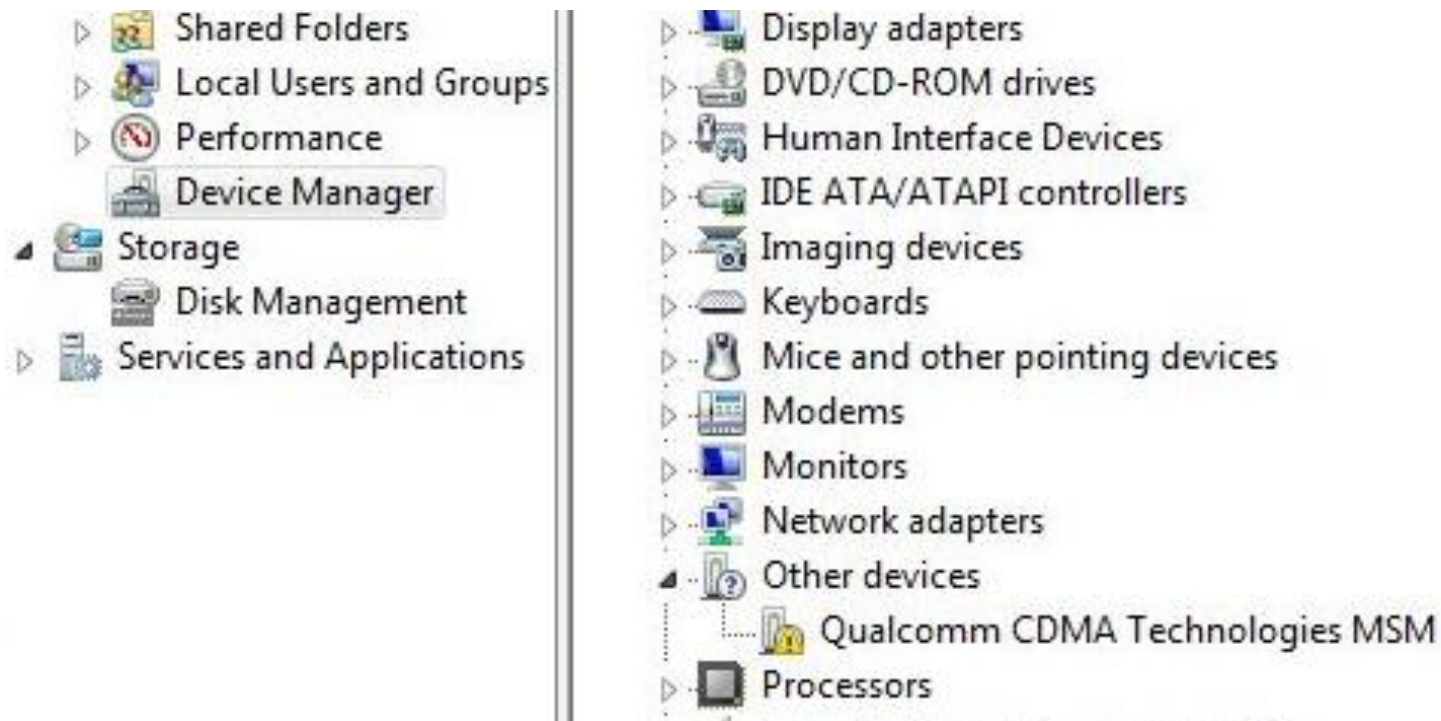
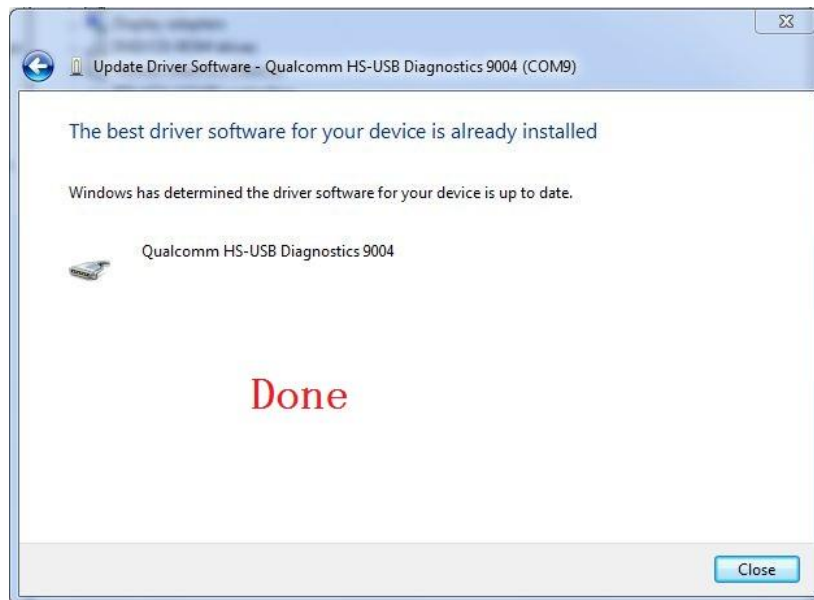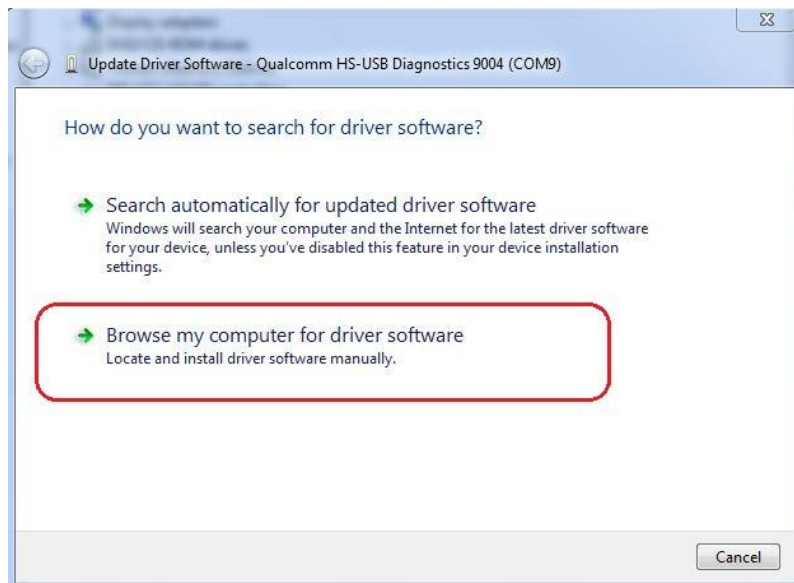| item	Description
①Computer	To install driver/ upgrade SW
②Tool	OEM_MEID_Writer(1.0.0.9)_Setup
③Data cable	5pin Micro USB cable
④OS supported	Windows 2000/XP/Vista/ Seven
⑤Driver	QSC1105_USB_Driver

2.Notice

- **Do not** disconnect USB cable when writing the MEID / IMEI.
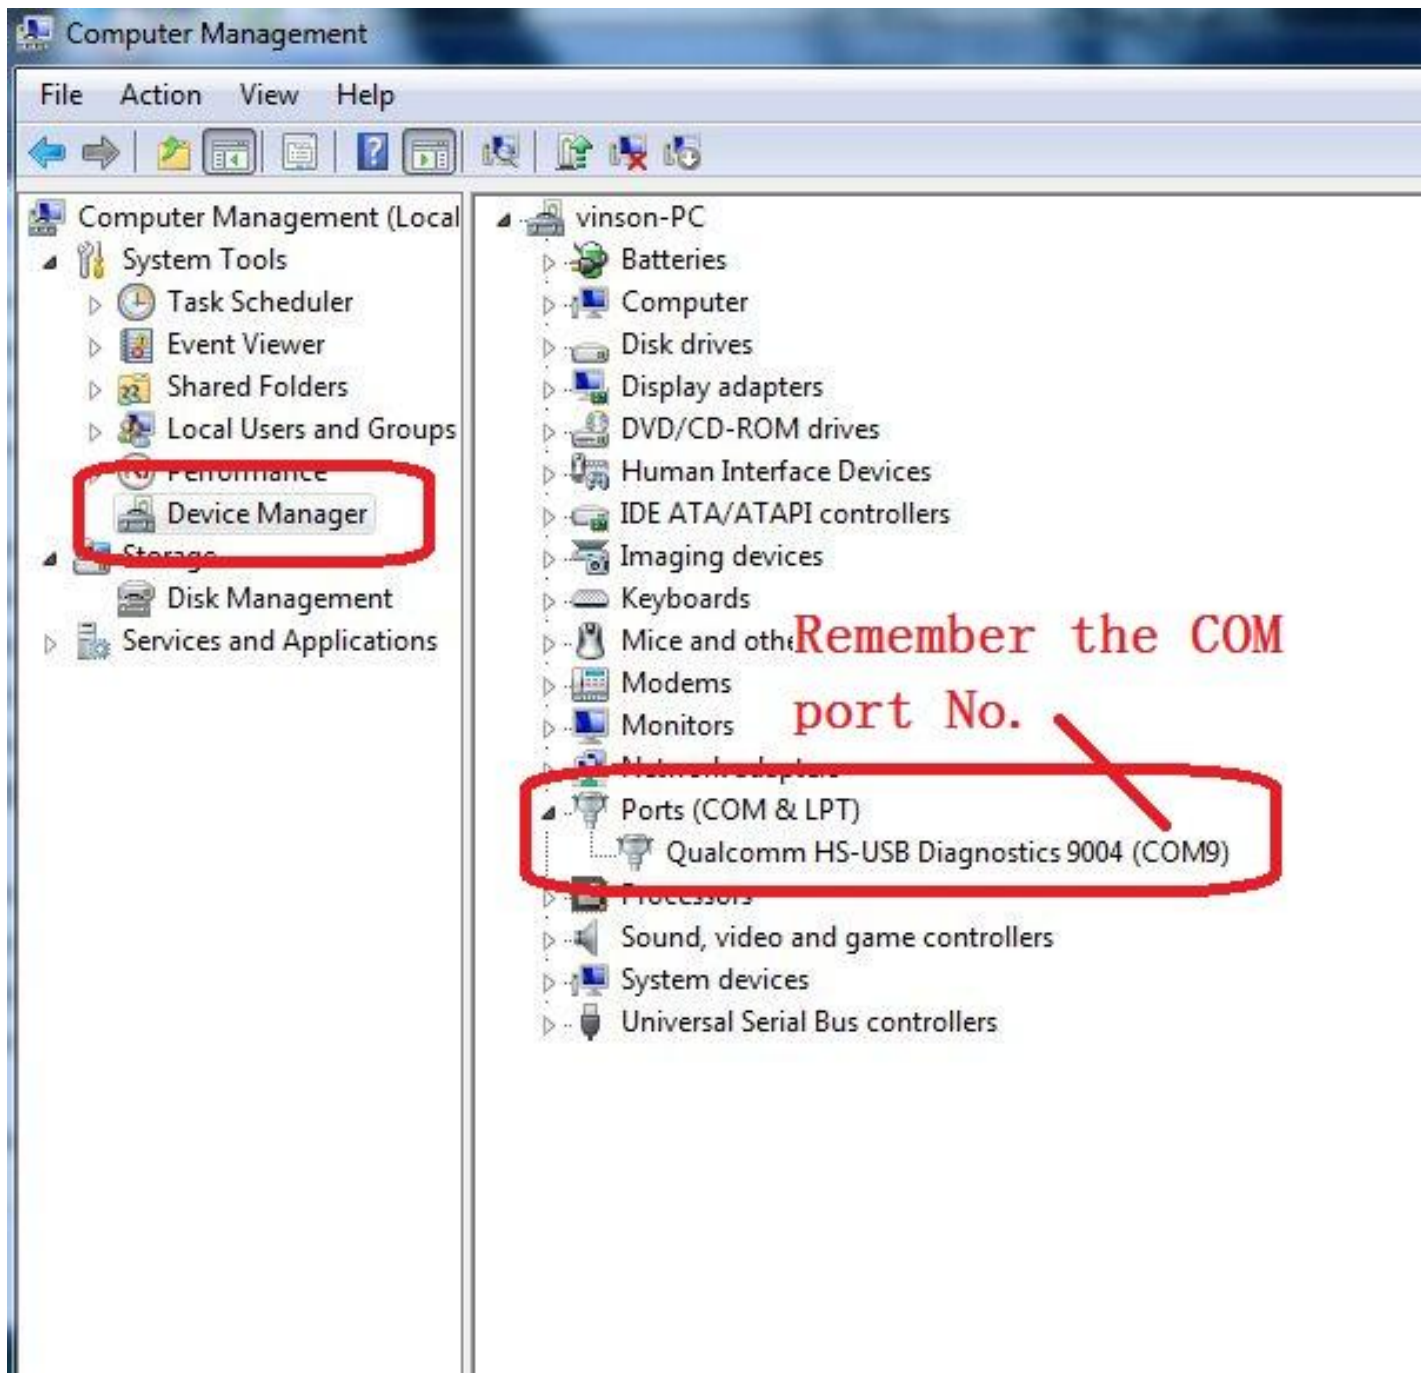- If you change to use other USB port or another PC, please check the COM port No. first.

3.Installation

- Install QSC1105 driver (the folder "QSC1105_USB_Driver") first when you first time connect the phone with PC

    1. ---Device Manager---find "other devices" or yellow mark
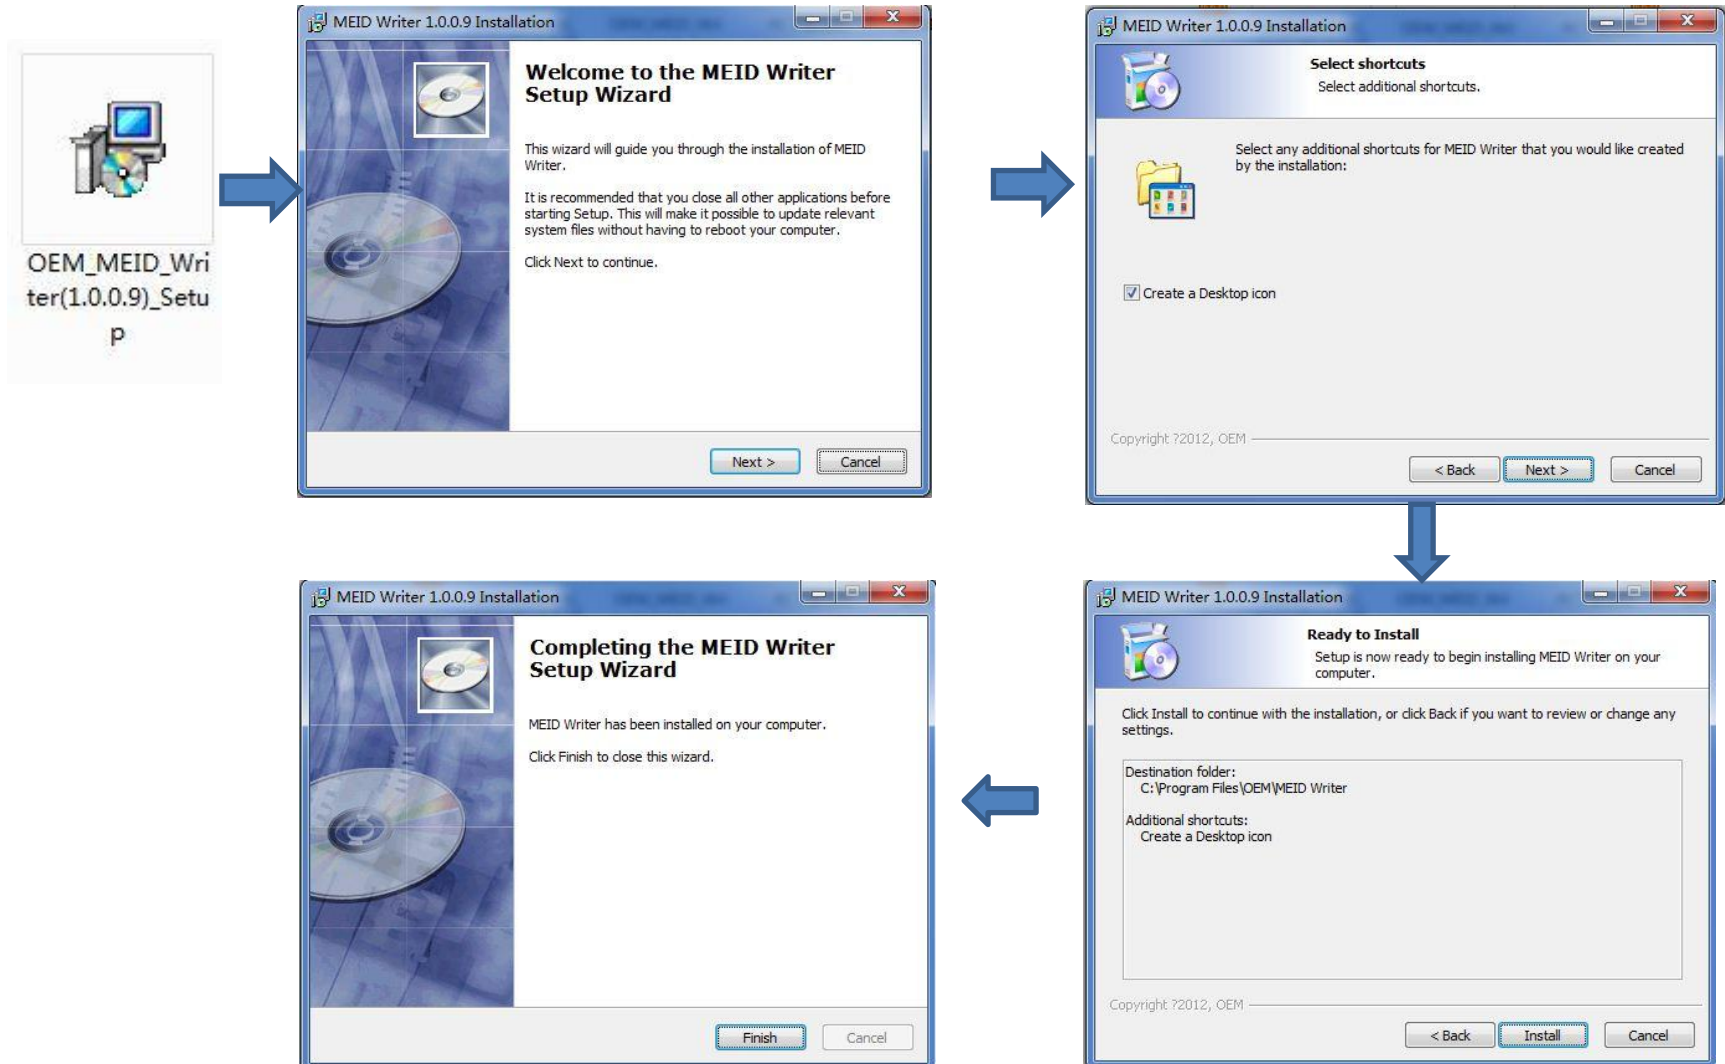
2. Install the driver as these step:

Update Driver Software - Qualcomm HS-USB Diagnostics 9004 (COM9)

How do you want to search for driver software?

→ Search automatically for updated driver software
Windows will search your computer and the Internet for the latest driver software for your device, unless you've disabled this feature in your device installation settings.

→ Browse my computer for driver software
Locate and install driver software manually.

Cancel

Update Driver Software - Qualcomm HS-USB Diagnostics 9004 (COM9)

Browse for driver software on your computer

Search for driver software in this location:

D:\QSC1105\QSC1105_USB_Driver   ▼   Browse...

☑ Include subfolders

→ Let me pick from a lis
This list will show installed c
software in the same catego

Location to the folder of QSC1105 driver

Next   Cancel

Update Driver Software - Qualcomm HS-USB Diagnostics 9004 (COM9)

The best driver software for your device is already installed

Windows has determined the driver software for your device is up to date.

Qualcomm HS-USB Diagnostics 9004
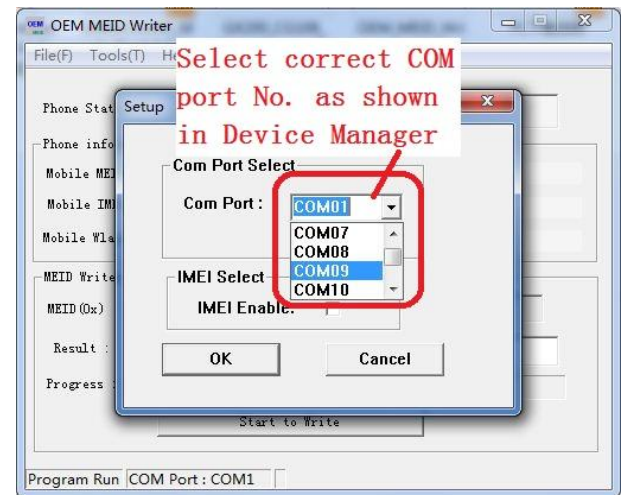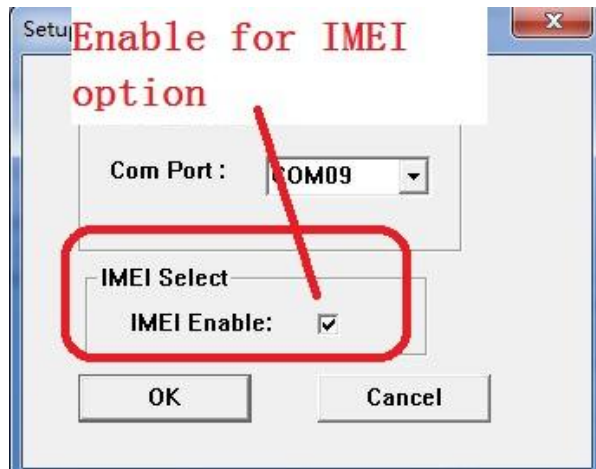
Done

Close

Remember the COM No. in Device manager

- Secondly , install the tool which named "OEM_MEID_Writer(1.0.0.9)_Setup" following the steps as below:

OEM_MEID_Wri
ter(1.0.0.9)_Setu
p

4.Writing MEID /IMEI

Double click the Icon
in the desktop

OEM MEID Writer

File(F) Tools(T) Help(H)

Phone States: **Connect OK & Communicating...**

Phone information

Write the MEID No. in here

Write the IMEI No. in here

MEID Writer

MEID(0x) : `12345678901234`   IMEI : `123456789012345`

Result : First IMEI.

Progress :

Start to Write

then press Start to begin

Program Run
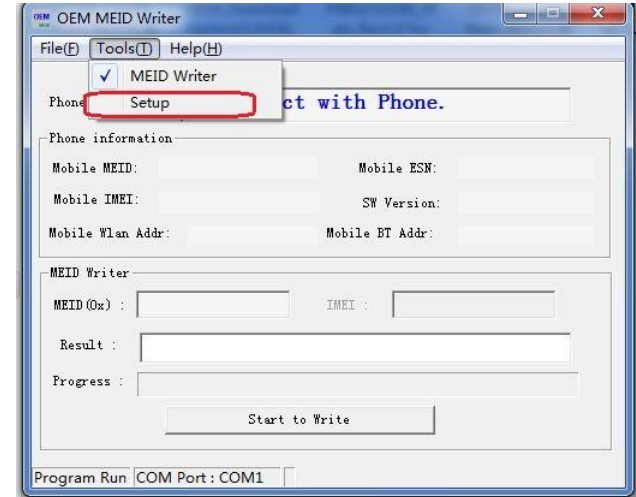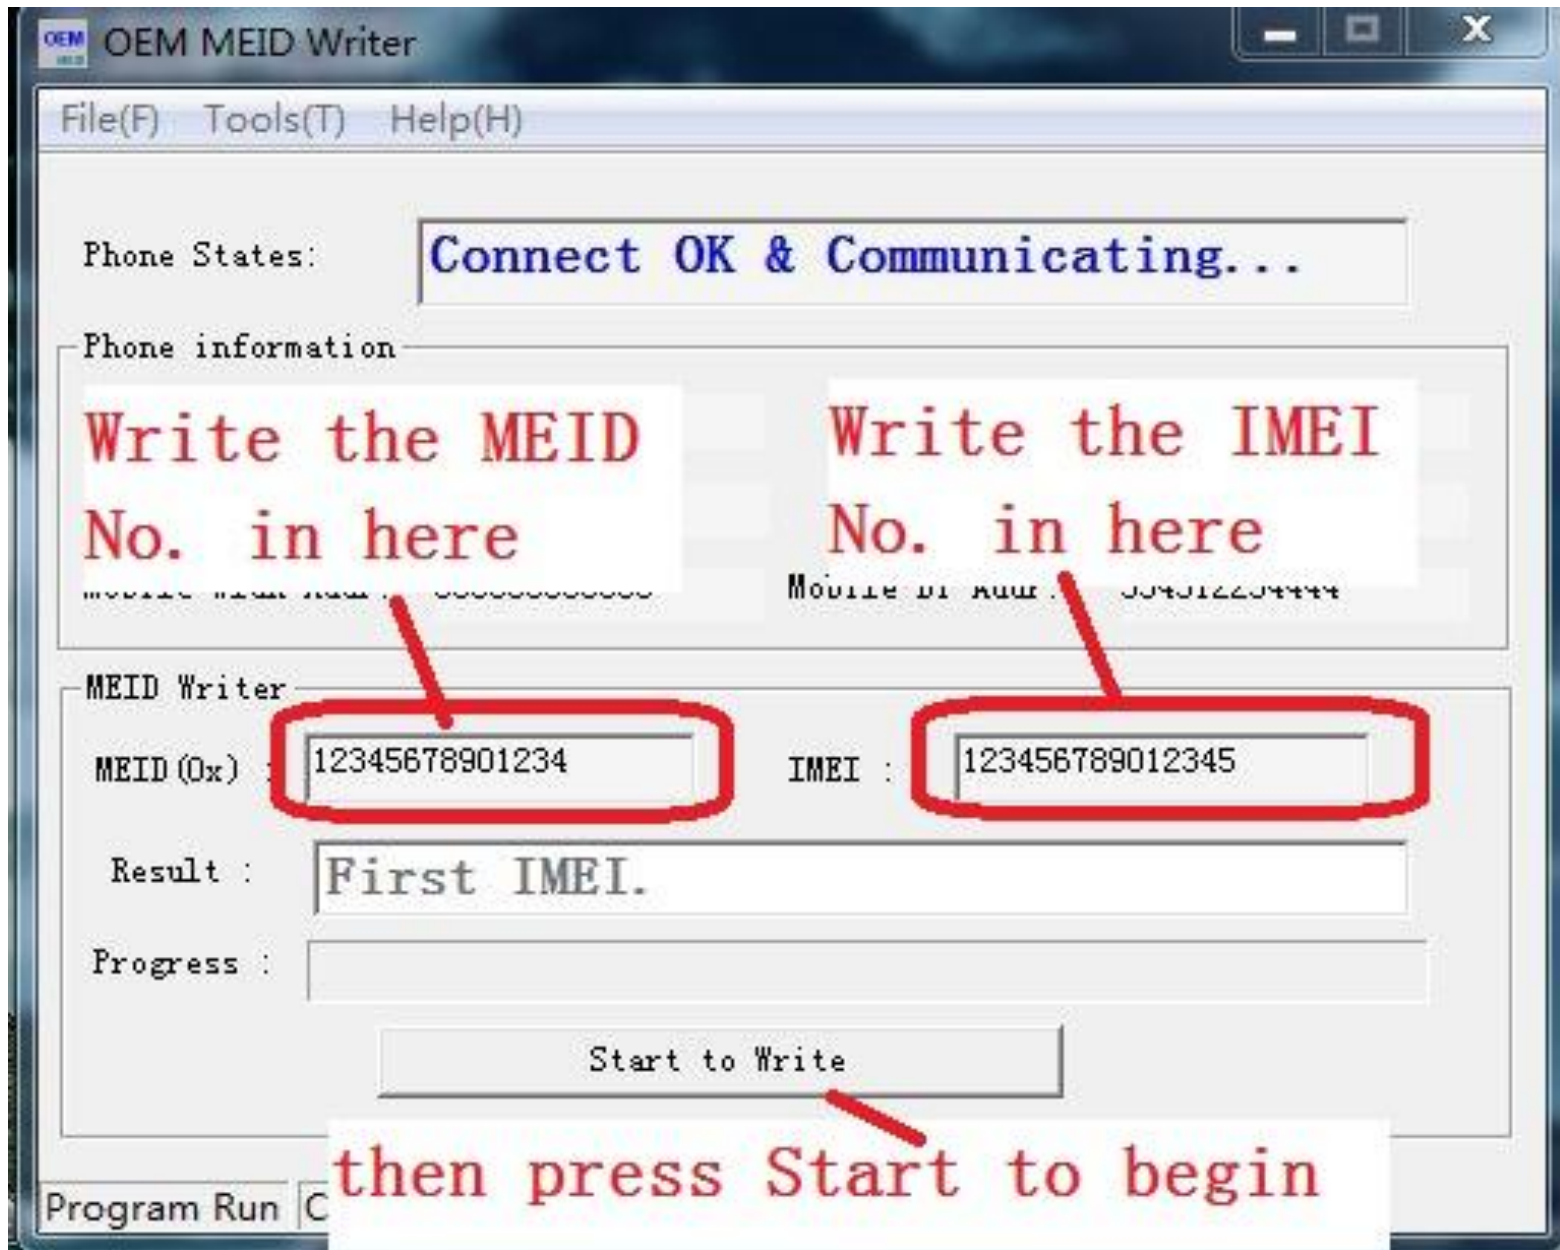
The handset will reboot automatically when it finish to write MEID & IMEI

Done